




54|98 Base Assembly Instructions AH-LMB-KIT-INST-2

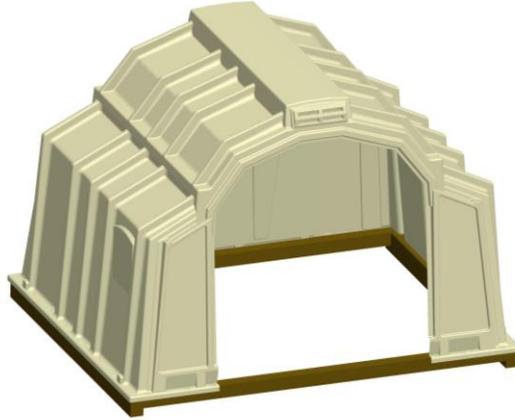

AH-LUMBER-KIT Bill of Material

Item	Hampel Item Number	Description	Qty
1	AH-150-2	Bolts and Washers Kit for Mounting Hutch	1
2	AH-LUMBER-002-1	Runner, Multimax Base	2
3	AH-LUMBER-001-1	Side, Multimax Base	2

Tools Needed:

1. 15/64" Drill Bit (For Softer Wood) or 1/4" Drill Bit (For Harder Wood)
2. Drill
3. 1/2" Deep Well socket
4. Ratchet

Step 1:

- A. Using 15/64" or 1/4" Drill Bit, drill (8) pilot holes. Repeat for all 4 corners (See Figure 1)

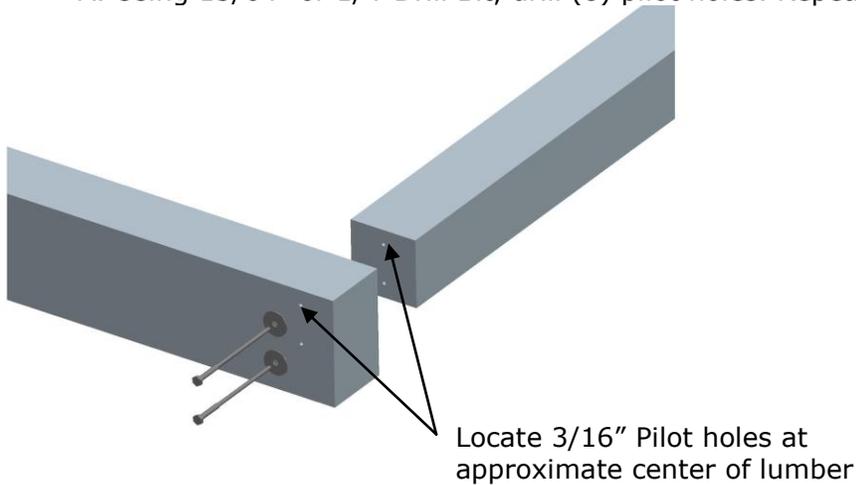


Figure 1



Step 2: Assemble Base

- A. Using 1/2" Deep Well Socket, assemble lumber using (2) 1" washers with (2) 6" x 5/16 Lag Screws. Repeat for all 4 corners (See Figure 1)

Step 3: Assemble Base to Hutch

- A. Using 1/2" Deep Well Socket, washers and screws, fasten (2) brackets near entrance securing Hutch to Base (see figure 2)
- B. Fasten Hutch to Base at remaining locations around perimeter using washers and screws.

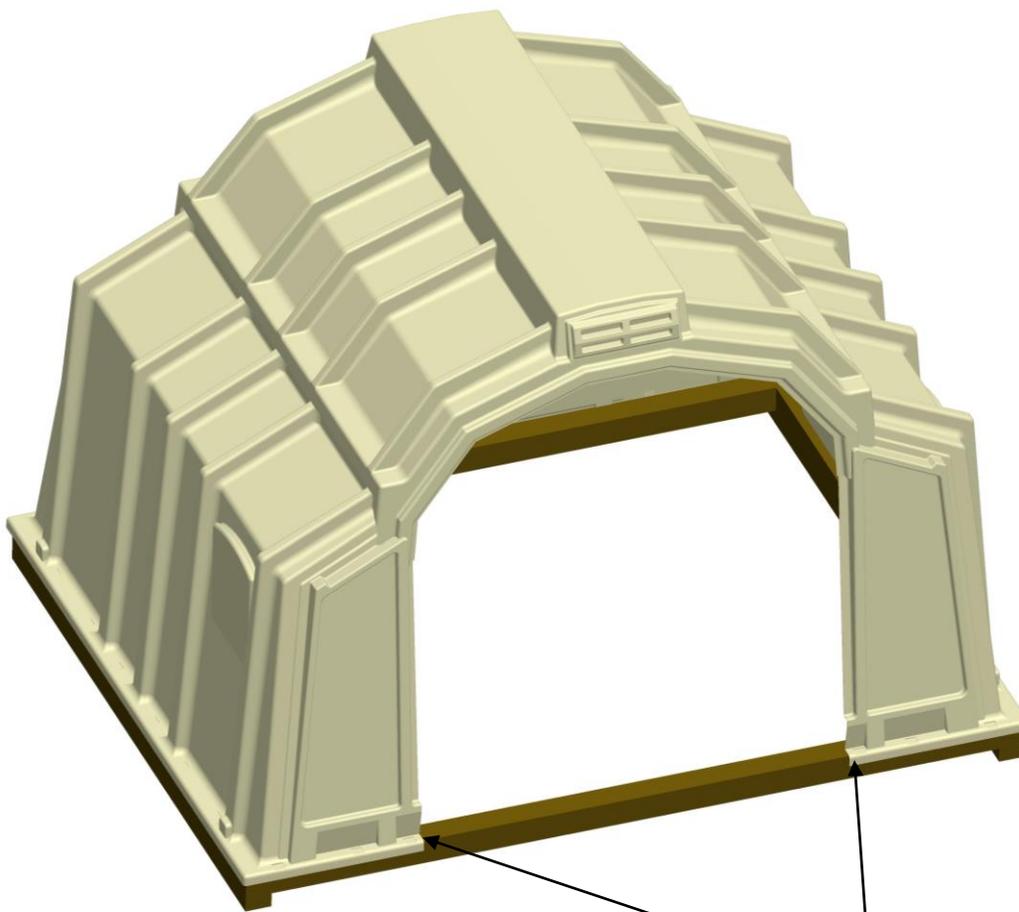


Figure 2

Entrance Bracket locations