

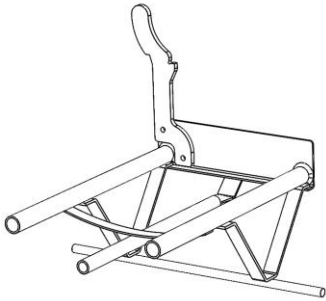


FARMER BOY Dead Animal Cart Assembly


STEP 1 – Loosely bolt one cradle arm to the frame. Do not tighten the bolts.

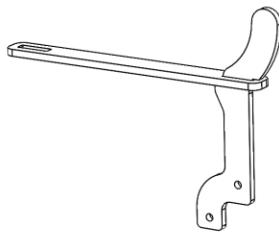


STEP 2 – Insert the other cradle arm through the one slot in the cross bar. The cross bar will rest on the small landing of the cradle arm.

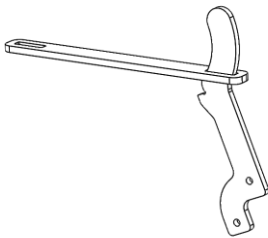

STEP 3 – Slide the other slot of the cross bar over the cradle arm that is loosely bolted to the frame.

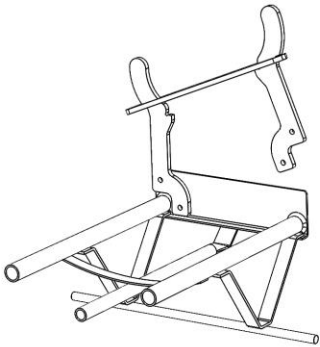

STEP 4 – Bolt the second cradle arm to the frame and tighten all the bolts.

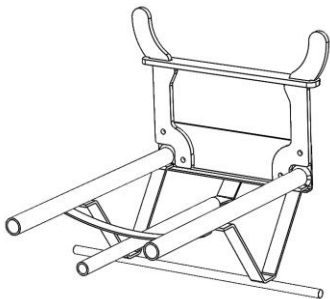

STEP 5 – Bolt the winch handle to the winch and assemble the wheels, wheel washers and cotter pins.

See **FARMER BOY** website for a video on how to assemble and use the cart.